

## Quick start – Playing a Karaoke song

Once you have gone through the Kwizoke Plus quick assembly guide and powered up the machine, the Karaoke software will load. You should see the following screen:



This is the Karaoke song selection screen. There are different ways of searching for a song but here we will cover two. For more information on finding songs, see the Karaoke section in the main Kwizoke Plus manual.

### Searching for a Karaoke song by title

To search for a song by title, you simply start to type the title of the song into the keyboard. After three or four letters have been typed, the screen will display a list of songs which match the letters you typed.

If no song appears, we do not have that song. Press the backspace key  to go back some letters and try again, or a different song. *Please refer to your 'Karaoke song listing by title' to check exact spellings of song names as this **will** make a difference.*

### Searching for a Karaoke song by artist

To search for a song by artist you must use the cursor keys   to select the at sign  and press return . You can now enter the name of the artist by typing in the keyboard. After three or four letters have been typed the screen will display a list of artists which match the letters you have typed. *Please refer to your 'Karaoke song listing by artist' to check exact spellings of artist names as this **will** make a difference.*

## Selecting a song




You should now be able to see the artist or song that you have searched for. Use the cursor keys   to move the arrows up and down next to your choice. Select your choice by pressing the return key . If you have searched by artist you will then be given a list of the songs for that artist so you can continue to use the cursor and return keys to choose and select.

**If you search by artist and are then taken back to the A-Z menu this means there are too many songs from that artist to fit on screen. Simply type in the first and second letter of the song you are looking for into the keyboard to bring up a list.**



The song will now be loaded and ready to play. You will notice that the play button highlighted in the diagram above is glowing. Press the return key  to start the karaoke song.

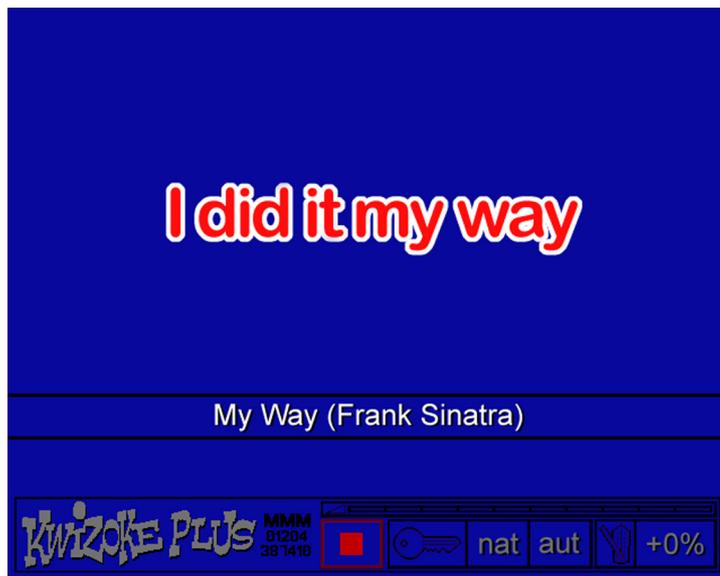

Once the song is playing you will notice some stars which slowly disappear. These are indicators displaying a countdown when the song introduction finishes and the singer will start singing.

When the words appear on screen, you will see that the singer should sing the syllables and words when they are highlighted in Red. Additionally there is a faint melody sound for the singer to follow.

When playing a song for the first time, it is a good idea to introduce volume from the master volume dials gradually until you get the volume levels to what you desire.

Next, turn on a microphone plugged into Channel 1 and start to sing, gradually increasing the Channel 1 Gain dial until you reach the volume level of the singer voice. You should now be set up for the rest of the session. *Please note ALWAYS turn down the Master Volume dials before you turn off the Karaoke machine.*



When the song is due to finish, a microphone will appear along with the song details. When the song has completely finished the song play screen will appear with the gold bar at the bottom.

## Returning to the song selection menu



Once the song has finished playing and you are returned to the song play screen, you can return to the song selection screen by using the cursor keys  and press **'UP' twice**. You will then see an arrow containing 'ABC'. This indicates returning to the selection menu. Press return  when the 'ABC' appears to return to the song selection screen.

**You can now repeat the instructions above to find and play songs on the Karaoke machine.**