


Kwizoke Plus quick assembly guide

Assemble the equipment at the back of the machine as shown then turn overleaf to check the settings before plugging in.

Kwizoke Machine Rear View

IMPORTANT


Do not plug into mains until steps ① to ⑥ are complete overleaf

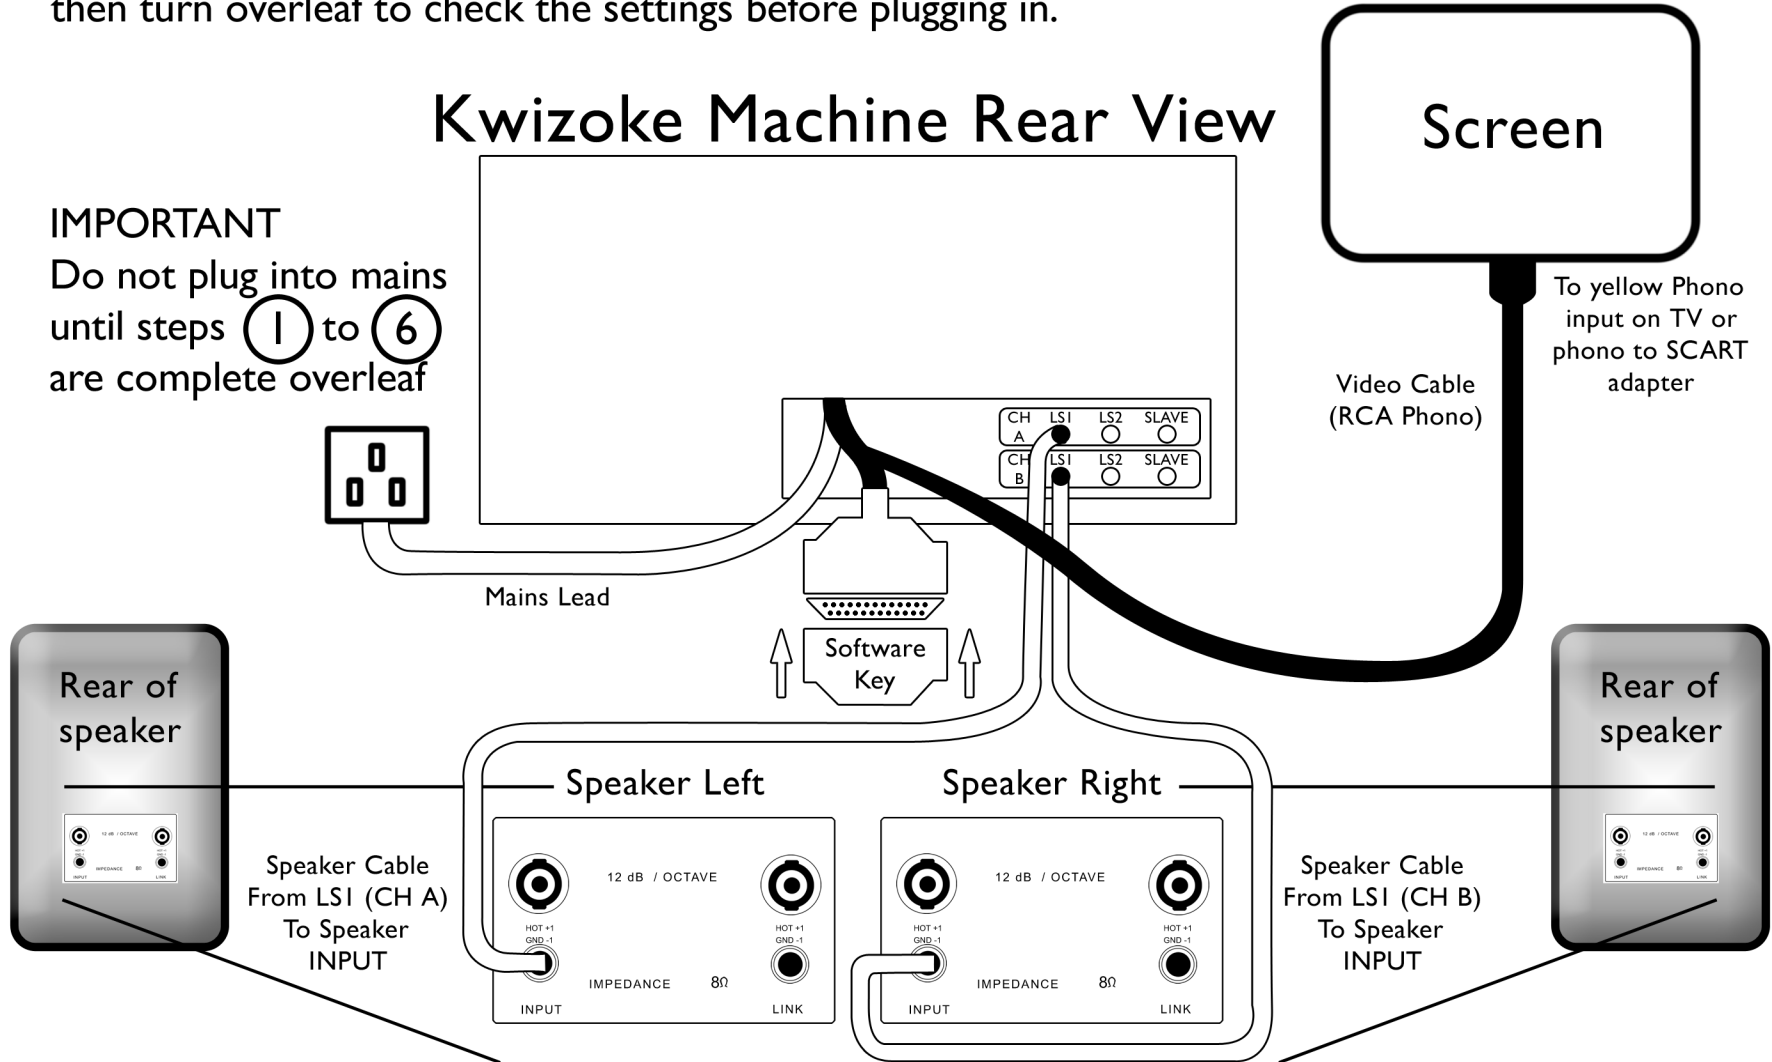

1

IMPORTANT: Do not plug in the karaoke machine unless Master Vol A and Vol B are full left and OFF.

Kwizoke Machine Front Set up

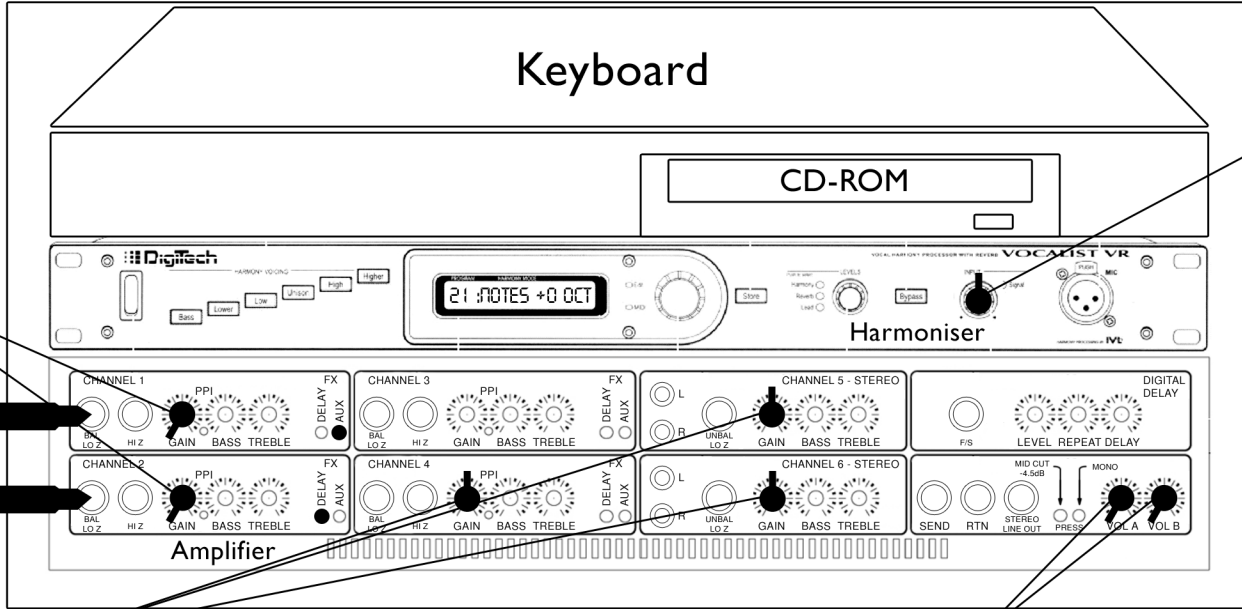

2

Channels 1 and 2 control microphone volume. Plug microphones into the left socket on channel 1 for Mic 1 and channel 2 for mic 2. Set the GAIN setting full left to OFF. When the music is on, slowly raise the mic gain to introduce voice. Make sure microphones are switched on. Note AUX should already be depressed on channel 1 and DELAY should be depressed on channel 2.

3

Channels 4, 5 and 6 control different aspects of the karaoke machine. Set the GAIN on channels 4, 5 and 6 to 12 O'Clock.

Channel 4 controls the quizmaster voice.
Channel 5 controls the karaoke music.
Channel 6 controls the quiz music.

Adjusting the GAIN on these channels will raise or lower the volume for that channel independent of the other channels.

4

Check the Harmoniser to make sure that the INPUT is set to 12 O'Clock. Note: After the karaoke machine is plugged into the mains, the Harmoniser LCD panel should display 21:Notes +0 Oct. If this doesn't, refer to the Kwizoke manual for instructions on setting up the Harmoniser.

5

VOL A and VOL B control the master volume from the Amplifier to the Speakers. IT IS VERY IMPORTANT that before you plug the Karaoke machine into the mains you make sure that VOL A and VOL B are set full left to OFF. Failure to do this will damage the Amplifier. NOTE: Once the machine is on and playing music, turn VOL A and VOL B up slowly and together to your desired volume. BEFORE UNPLUGGING THE MACHINE make sure to turn VOL A and VOL B back to OFF.

6

After completing these steps you can now plug the Karaoke machine into the mains supply.